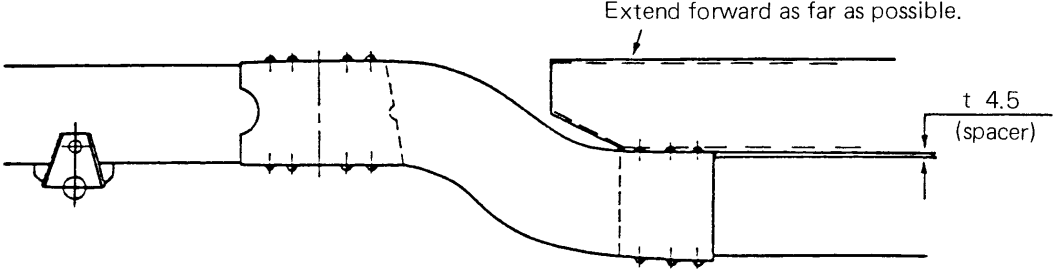
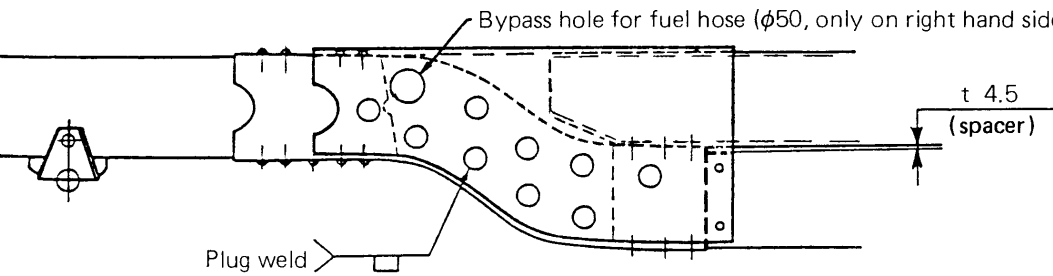


Location	Caution (Continued)
<p><b>4.5</b>  <b>Mounting of rear body (FG only)</b></p>	<p>(1) When mounting a subframe on the 4WD frame, follow the instructions below.</p> <p>(a) For general uses</p>  <p style="text-align: right;"><b>Fig. 4.8</b></p> <p>(b) For cases where there may be stress concentration on the chassis frame or excessive input. Reinforce the frame using an L-shaped stiffener as shown in the figure below. Be sure to tighten the plug weld (<math>\phi 30</math>), existing battery, fuel tank, spare-tire hanger, etc. at the same time.</p>  <p style="text-align: right;"><b>Fig. 4.9</b></p> <p>(2) For installing a dump body, install a float control valve in the hydraulic system to avoid an abrupt dump action with heavy cargo loaded.</p>